

- ⊕ -L1-N Mains voltage
- Watch! Phase sensitive
- 1-3 Lockout input
- 4-5 Boiler enable
- 6-7 Direct hot water sensor
- 8-9 External influence 0-5V
- 10-11 Scm bus
- 12-13 PWM pump


Thermostat
see option
05S3000E02


or

DHW
sensor

- *1 By connection remove jumper.
- *2 Optional, for order see parts list.
- *3 Along with option weather compensated regulation.

A	24-11-2004 R.L.	Wiring diagram Serie R30 type 120		DAT. 12-07-2004 GET. R.L. GEC. E.H.	B3120E02 A B C	Page 1 - 2
B	13-01-2005 R.L.					
C	13-04-2005 R.L.					

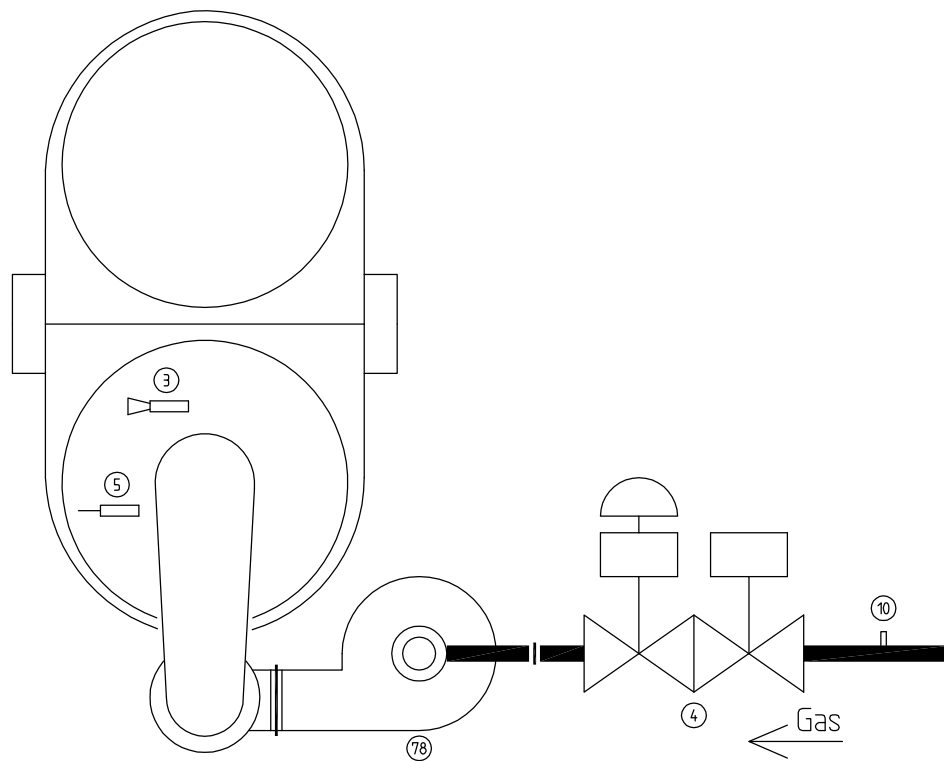

A	24-11-2004 R.L.	Gas train Serie R30 type 120				
B	13-01-2005 R.L.					
C	13-04-2005 R.L.					
			DAT. 12-07-2004	B3120E02		Page
			GET. R.L.			2 - 2
			GEC. R.L.	A	B	C